

## ***Safetec Manual Dispenser***

Safetec offers a Manual Dispenser for Instant Hand Sanitizer; and a Manual Dispenser for SaniWash Antimicrobial Hand Soap.



**Manual Dispenser  
(Hand Sanitizer & Soap)  
2510037**

**Front**



**Back**



### **Drip Tray 2510122**

This drip tray can be used on the Manual Dispenser

↙ The product also has adhesive placed on the back to easily adhere to surfaces, as an alternative to using screws

# Manual Dispenser

## Instant Hand Sanitizer (Fresh Scent)

- Kills 99.9% of germs (*Active ingredient: 66.5% Ethyl Alcohol*)
- Formula evaporates completely, leaving no sticky residue on hands
- Enriching aloe vera adds moisture with each use, increasing skin hydration

Item#	Description	Case Qty.	Case Wt.
2510037	Manual Dispenser	12 per cs.	tbd
17360	800ml Manual Dispenser Refill	12 per cs.	22 lbs.
2510122	Drip Tray	1 each	tbd

### Compliance

Meets OSHA, APIC and CDC hand washing recommendations in the absence of soap and water

*\*Meets ADA operability*

2510122



Drip Tray

2510037



17360



Manual Dispenser and Refill

## SaniWash® Antibacterial Hand Soap

- Aids in reducing the risk of cross-contamination
- Colorless soap, with a mild pleasant fragrance
- Uses PCMX for antimicrobial action and contains aloe vera for added moisture with each use

Item#	Description	Case Qty.	Case Wt.
2510037	Manual Dispenser	12 per cs.	tbd
34465	800ml Manual Dispenser Refill	12 per cs.	22 lbs
2510122	Drip Tray	1 each	tbd

### Compliance

Meets OSHA and APIC hand washing recommendations

*\*Meets ADA operability*

2510037



34465



2510122



Manual Dispenser and Refill

Drip Tray

## Industry Uses

**Healthcare:** Hospitals, physician's offices, labs, pharmacies, long-term care facilities and etc.

**Occupational Health & Safety:** Government agencies, shipping facilities, schools, jan-san and etc.

# Dispenser Instructions

## ① Select your Dispenser



## ② Choose your Refill



## ③ Add a Drip Tray



This Drip Tray can be used on the Manual Dispenser and is a nice add-on feature.

Adhesive tabs on the back easily adhere to surfaces, as an alternative to using screws.


## Manual Dispenser Mounting Instructions

### Tape Mounting

# 1

1. Only recommended for mirrors or other similar flat surfaces  
(Clean flat surface with towelette with an abrasive cleanser prior to using towelette. Dry surface thoroughly)
2. Remove backing from tape and press firmly against mounting surface for 10 seconds. Open cover and press directly on back plate for additional 10 seconds. **Allow 8 hours before loading unit.**
3. **Opening Instructions:** Push up on two release buttons on each side of base with thumb and forefinger. With other hand, gently pull cover away from wall at top of dispenser.

(For locking units – insert provided key into keyhole in right-hand release button and press upward; key must remain in keyhole while closing dispenser)

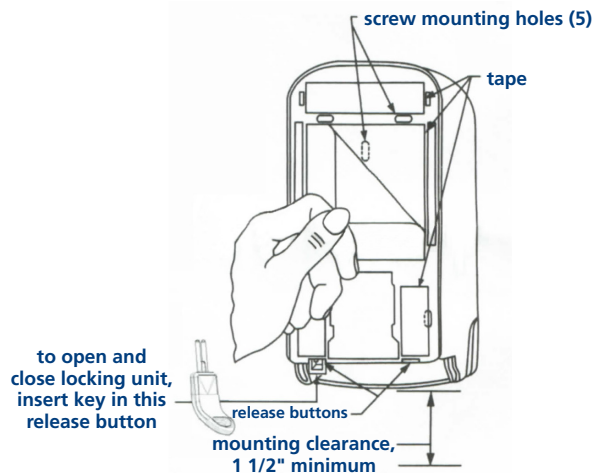

### Screw Mounting


1. Recommended for surfaces that are not ideal for Tape Mounting
2. Hold dispenser against wall in desired position, open cover and mark screw hole location on wall, insuring screw heads will not interfere with release bar.
3. Use appropriate anchors and drill size for #10 x 1" self-taping screws to attach dispenser firmly to the wall.

## Manual Dispenser Refill Instructions

# 2

1. Press finger into perforated area and remove key-hole perforated shaped area.
2. Locate nozzle and pull down through bottom of box.
3. Place cartridge on dispenser platform. Pull nozzle with thumb and forefinger to rotate top of tub so Arc of Half Moon Pump is facing toward you.

**Arc of Half Moon Pump**

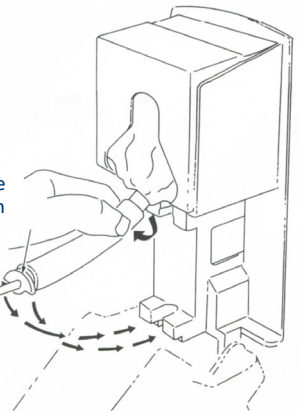

**Upper Locator**

4. Place top of tube firmly in neck of upper locator and fit Ears of Half Moon Pump into Lower Locator Slots.

**Ears of Half Moon Pump**

5. Before closing the cover, check to make sure **Arc of Half Moon Pump** is facing toward you and **Ears of Half Moon Pump** are firmly seated in slots of lower locator.

**Lower Locator Slots**

